ASSEMBLY AND INSTALLATION INSTRUCTIONS

LK34211

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. The combined weight of your ceiling fan and light kit cannot exceed 35 pounds unless additional support is provided for the fan.

Fig.1

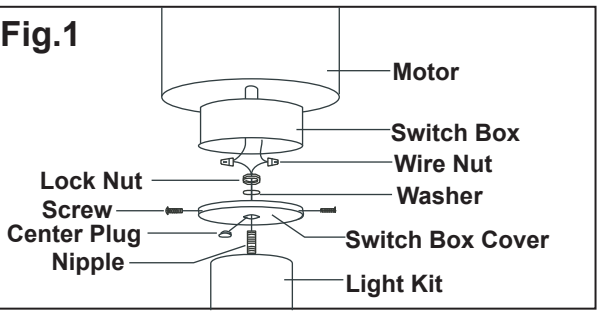

Fig.2

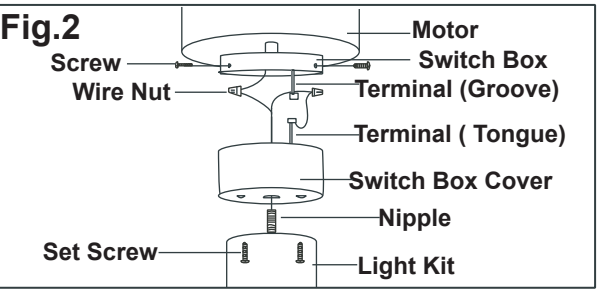

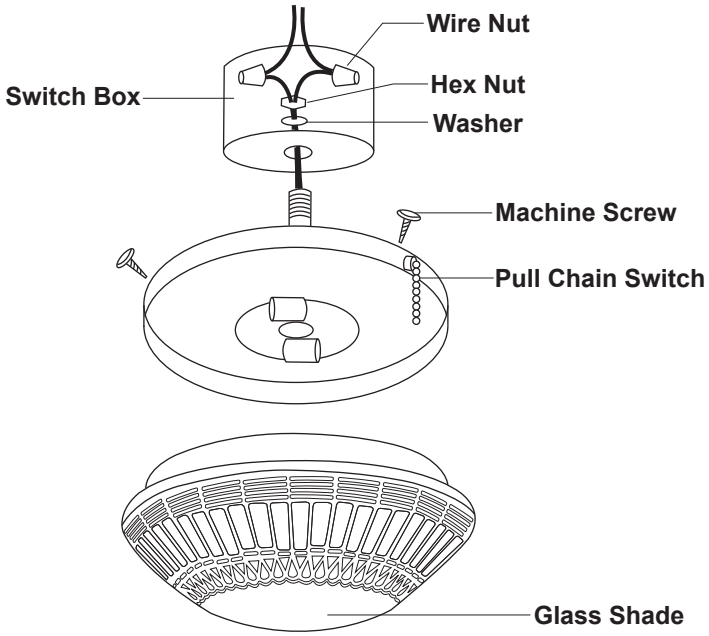

1. Remove the switch box cover from the fan by loosing the three screws.
2. Unscrew and discard the center plug from the switch box cover.
3. For fan style that is shown in Fig.1: Please attach the nipple of the light kit to the hole of the switch box cover, then thread the wires through the washer and hex nut, and secure them tightly.
4. For fan style that is shown in Fig.2: Please attach the nipple of the light kit to the hole in the center of the switch box cover, then secure the light kit with the two set screws to switch box cover.
5. Pull out the wires from the switch box. Make wire connections using the wire nuts:
   ---Connect the black wire from the light kit to the black or blue wire from the fan.
   ---Connect the white wire from the light kit to the white wire from the fan.
   Carefully tuck wires back into the switch box cover.
6. Attach the switch box cover back to the switch box by using the three screws.
7. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
8. Attach the glass shade to the light fixture with three machine screws.
9. Turn on the power at the main fuse or circuit breaker box. (You can control the light with the pull chain.)

aireRyder™

060413